





## Citrus-fruit juicer

### Dear Customer,

Before using the appliance, the user should read the following instructions carefully.

### Connection to the mains supply

Make sure that the supply voltage corresponds with the voltage marked on the rating label. This product complies with all binding CE labelling directives.

### Familiarisation

1. Dust cover
2. Large juicer cone
3. Small juicer cone
4. Pulp sieve
5. Juice container
6. Stainless-steel spout with drip-stop
7. Drive shaft
8. Base unit
9. Power cord with plug
10. Rating label (on underside of base unit)

### Important safety instructions

- Before the appliance is used, the main body including the power cord and any attachment fitted should be checked thoroughly for any defects. Should the appliance, for instance, have been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on the operational safety of the appliance.
- Do not allow the appliance or its power cord to touch hot surfaces or to come into contact with any heat sources.
- **Always remove the plug from the wall socket**
  - after use,
  - in case of any malfunction, and also
  - before cleaning the appliance.
- When removing the plug from the wall socket, never pull on the power cord. Do not let the power cord hang free.
- This appliance should only be used with

the attachments provided by the manufacturer and in accordance with the purposes described in this manual.

- This appliance is not intended for use by any person (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel. If repairs are needed, please send the appliance to one of our customer service departments. The address can be found in the appendix to this manual.

### Before using for the first time

Before the juicer is used for the first time, it must be cleaned as described in the section *General Care and Cleaning*.

### Operation

- Attach the juice container to the drive shaft of the base unit.
- Place the pulp sieve in the container.
- Fit the small juicer cone on to the drive shaft. If necessary, the large juicer cone may be fitted on top of the small cone.
- Push the spout upwards to ensure that the extracted juice remains in the container. However, the juice may also be collected straight into a suitable container placed under the spout: in this case, the spout must face downwards.
- Insert the plug into a suitable wall socket.
- Cut the citrus fruit in half and push one

of the halves lightly down on to the cone with the cut section facing downwards.

- The drive shaft will start rotating automatically once pressure is applied to the cone. The appliance switches off when pressure on the cone is lifted.
- When processing larger quantities of fruit, the pulp sieve must be emptied from time to time as necessary.
- To collect the juice, place a suitable container under the spout. Push the spout downwards. The extracted juice passes now straight into the container. Once the desired amount of juice has been collected, push the spout upwards again.
- Ensure the plug is removed from the wall socket after use.

### **General Care and Cleaning**

- Before cleaning the appliance, remove the plug from the wall socket.
- To avoid the risk of electric shock, do not clean the base unit or power cord with water, and do not immerse them in water.
- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
  - The base unit may be wiped with a slightly damp, lint-free cloth.
  - The attachments should be thoroughly cleaned using hot water and a mild detergent. The pulp sieve may also be cleaned in a dish-washer.

### **Storage**

For periods of non-use, attach the pulp sieve and the dust cover to the appliance after cleaning.

### **Disposal**



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.

### **Guarantee**

This product is guaranteed against defects in